

Coastal

hanley wood

Contractor

March/April 2007 \$4.95

Successful Shingles

Rain-screen details keep water out of walls

Erosion Control

Combating Condensation

Preserving the Past

P.O. Box 3570 / Northbrook, IL 60065-3570

Change Service Requested

PRST STD
US POSTAGE
PAID
PONTIAC, IL
PERMIT #312

coastalcontractor.net

The Causes of Condensation

Q: I have customers who complain about condensation forming on insulated windows and skylights. What should we look for in a window or skylight to prevent this problem?

A: *Steve Easley responds:* Windows do not cause condensation; it's high humidity that's the culprit. Understanding how condensation forms on windows will help you determine what should be done to correct the problem.

Moisture vapor in the air condenses on cold surfaces in a home where the air reaches its dew point. This is common when there is a large difference between inside and outside temperatures and when the relative humidity — the amount of moisture in the air relative to its temperature — of the warm side is high. Typically, the coldest surfaces in a home are on the windows — most often at the edges, where conduction is greatest. In extreme cases, when indoor humidity conditions are very high, chronic condensation at the edges of the glass can create a significant moisture

problem that leads first to peeling paint, then to mildew and mold, and eventually to rot (**Figure 1**).

Window condensation is more than a simple inconvenience to the person who is looking out the glass; it's a red flag that there could be serious moisture problems in the home as well. If condensation is forming frequently on the glass, it's likely to be forming inside walls where there are pockets of poor insulation and where air leaks are bringing warm, moist air into contact with cold surfaces.

Condensation can form in both very



PHOTOS: STEVE EASLEY

FIGURE 1. High indoor humidity levels, aggravated by a window blind that reduced the drying effect of air circulation, has created a condensation problem that has led to mold growth. In this case, the homeowner's lifestyle lies at the root of the problem, but it's not helped by an ordinary insulated window without warm-edge low-conductive glass.

hot and very cold weather. On a cold wintertime night when the indoor temperature may be 50 degrees or more than the outside temperature, condensation on the inside edges of an insulated glass window is possible, depending on indoor humidity conditions. Similarly, on a hot Florida summer day, condensation may form on the outside surfaces of the windows of a heavily air conditioned home.

SOLUTIONS TO THE PROBLEM

You can reduce or eliminate condensation by changing the dew point — the point at which the




Got a question?

We want to hear from you!

E-MAIL
coastal-editorial@hanleywood.com

MAIL
Coastal Contractor Magazine
Attn: Soundings
186 Allen Brook Lane
Williston, VT 05495

JLC's Ultimate Answer Book

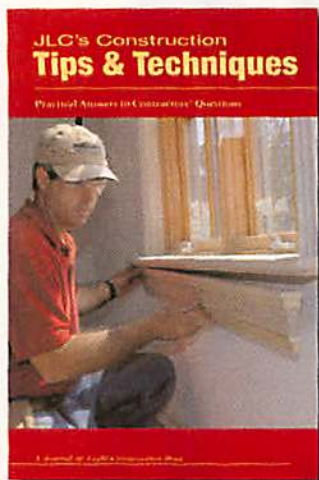

Item #CCT36..... \$32.50

Get a lock on more than 20 years of practical jobsite solutions in this brand-new book from *The Journal of Light Construction!*

From wood I-joint squash blocks to UV blockers on trim finishes, *JLC's Construction Tips & Techniques* is packed with detailed explanations and practical solutions on all aspects of residential construction. So you can confidently deal with the inevitable curves a project or client will throw your way.

Explains how to handle hundreds of complex questions and challenges, including

- Foundations & Sitework
- Framing
- Roofing
- Exteriors
- Plumbing & Electrical
- Thermal & Moisture
- HVAC
- Interiors

It's the perfect companion to the JLC Field Guide.

JLC's Tips & Techniques is based on the same best practices you'll find in the best-selling *JLC Field Guide to Residential Construction*. And like the *Field Guide*, it's packed with precise illustrations that clarify even the most complex details.

The result—a handy field reference with the expert tips and techniques you need to solve more than 300 construction challenges.

Satisfaction guaranteed or your money back.

www.jlcbooks.com/tt

~ Soundings

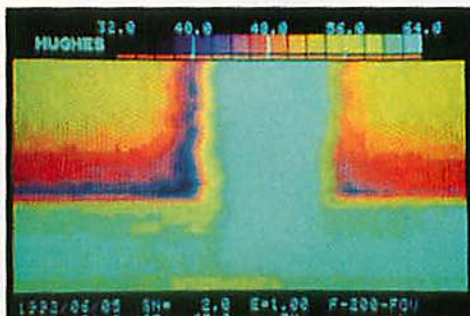
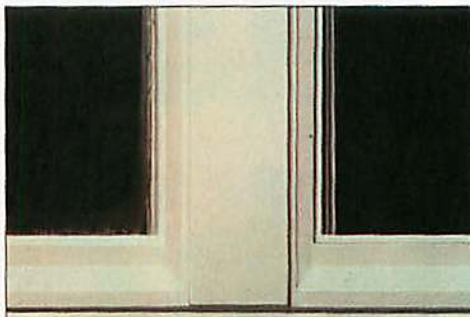


FIGURE 3. In the photos shown at left, the window on the far left (in both the photo and the thermograph) has a standard edge spacer — a highly conductive piece of extruded aluminum that quickly lowers the temperature at the edge of the glass and allows the indoor humidity to reach its dew point. The window on the right of each image has edge spacers often referred to as “warm-edge technology.” These spacers conduct less heat, lowering the window’s potential for edge condensation.

trick. Single-pane glass (represented by the red curve on the bottom of the graph) combined with an average winter outdoor temperature of 30°F will produce condensation on the window when the inside RH is just over 30%. That’s a pretty low indoor humidity level. In this case, simply switching to double-pane windows will solve the problem. Here’s a quick look at window options:

If windows need to be replaced.

Switch from an existing single-pane to a double-pane window. It’s not uncommon to see condensation on old single-pane windows, even in normal humidity conditions. Switching to an insulated glass unit will often solve the problem.

In new construction. Invest in a window that uses warm-edge technologies to reduce conduction at the edges of insulated glass units. This can keep the window edges warm and reduce the chances for condensation to form

(**Figure 3**). However, because condensation forming on the edges of an insulated glass unit indicates excessive moisture levels, it is usually better to solve the humidity problem before investing in window upgrades.

When upgrading. Choose an insulated glass unit with an argon or krypton gas fill, which provides a little better insulation value and reduces convection between the panels. This may be the best option for a window in a kitchen or bath, where even exhausting the humidity may not be enough to avoid condensation forming at the edges of the glass.

I recommend that contractors carry a digital hygrometer to measure and record indoor relative humidity while in customers’ homes (**Figure 4**, page 18). These relatively low-priced tools can go a long way to communicating clearly with clients about the indoor environment and what the options are for fixing a problem.

harsh environments
can sink
a wood deck
surface

CorrectDeck CX
sails right
through
harsh weather

STAIN RESISTANT • FADE RESISTANT • MOLD RESISTANT



CorrectDeck[®]CX

CorrectDeckCX is made from the strongest composite, so it can stand up to the tortures of rough weather. It has a deeply embossed woodgrain that is slip-resistant, even when wet, and is designed for easy wood deck replacement or new deck construction.

Visit the Professional's section of our website for a free sample.

1-877-DECK-877

Correct
Deck
Good for Life[®]

www.correctdeck.com

Circle #5

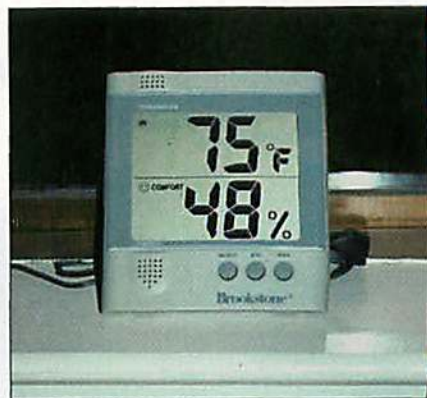


FIGURE 4. Prices for a digital hygrometer range from about \$30 to \$300, but a low-cost model such as this one is sufficient for most remodelers. This tool is primarily an aid for talking to clients about temperature and humidity and explaining the causes of condensation on glass even when it's not visible.

LEGITIMATE CALLBACKS

Of course, there are callbacks associated with condensation that can be blamed on the window. The most obvious failure is condensation between the panes of glass in an insulated glass unit (IGU) caused by a broken seal. When the seal breaks, moisture-laden air leaks in and condenses on the coldest surface inside the IGU. The only cure is to replace the IGU (or usually the whole sash unit).

Sometimes the seal may break and the environmental conditions do not cause condensation inside the unit. Slowly, the low-E coating, which is typically put on one of the inside surfaces, will oxidize. This appears like a permanent smudge or fog that can't be wiped off. This, too, warrants a replacement of the unit.

Steve Easley is president of BMI, a company that consults with builders on field issues and provides training on building science.